



A

B

C

D

E

F

G1

>	OPERATING PANEL	CONTROL MODE
0	● ● ● ● ●	CONSTANT CURVE 1
1	● ● ● ● ●	CONSTANT CURVE 2
2	● ● ● ● ●	CONSTANT CURVE 3 - MAX
3	● ● ● ● ●	PWM PROFILE C - SIGNAL OFF
	● ● ● ● ●	PWM PROFILE C - SIGNAL ON

FLASH INDICATION	
●	1 FLASH PER SECOND
●●●●●	12 FLASHES PER SECOND

E

**INTERNALLY CONTROLLED
CONSTANT CURVE**

1 x 230 V - 15% / +10%
~ 50 Hz ⊕

1/On

0/Off

**EXTERNALLY CONTROLLED
PWM C PROFILE
SOLAR**

1 x 230 V - 15% / +10%
~ 50 Hz ⊕

1/On

0/Off

G2

FAULT	OPERATING PANEL	REMEDY
OFF 0 V	● ● ● ● ●	A: Check cable connection. B: Switch ON. C: Check controller.
ON 230 V	● ● ● ● ●	1: Switch OFF. 2: Tighten screws. 5 mm No.2 screwdriver.
ON <160 V	● ● ● ● ●	Check voltage level.
ON 230 V	● ● ● ● ●	1: Switch OFF. 2: Tighten screws. 3: Check pump. 4: Return to box.